



bestchoiceproducts

# Assorted Tabletop CHRISTMAS DECORATIONS

## ! NOTICE

Please retain these instructions for future reference.


- Indoor use only. This product is not intended for outdoor use.
- Every 8 hours of use, disconnect product for 10 minutes.
- It is recommended that you do not use for more than 12 hours at a time.
- This product is seasonal and not intended for permanent installation or use.
- This product is intended only for decoration and is not suitable for lighting a room.
- Remove all packaging before plugging this item into a wall outlet.
- Unplug the product when not in use or when unattended.
- Do not allow children to play with this item; this is NOT a toy.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

## ! WARNING

- Do not place near sources of heat such as fireplaces, candles, or heaters.
- Do not cover this product with cloth, paper, or other materials when in use.
- Do not secure wiring where it can be damaged, such as with staples/nails or on sharp hooks.
- Do not touch small parts as they are fragile.
- Do not touch or intentionally impede the movement of the product as it may damage the movement mechanism.
- Do not let anything rest on the supply cord or any wire. Do not close doors or windows on the cord.
- Do not use product if cord or wire insulation is frayed, cut, or otherwise damaged.
- Do not use product if there are cracks in lights or enclosures, loose connections, or visible/exposed wire.

## OPERATING INSTRUCTIONS

1. Carefully remove product from packaging and place in an upright position on a flat and stable surface.
2. Plug tabletop decoration into a wall outlet.
3. Flip power switch to your desired setting.
  - **ON:** Operates with light and motion.
  - **MUSIC:** Operates with light, motion, and music. Adjust volume knob as desired.
    - SKY5192 does not have music or a volume knob.
  - **OFF**

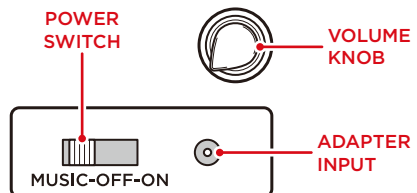

**NOTE:** If LED lights are dim or do not turn on, carefully press or rotate the lights to restore proper connection.



# HELP CENTER



Question about your product? We're here to help. Visit us at:

[help.bestchoiceproducts.com](http://help.bestchoiceproducts.com)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.