



bestchoiceproducts

ASSEMBLY INSTRUCTION


10-Foot Hammock Stand
SKY3155

NOTICE

- Firmly secure all screws before use.
- Product is intended for outdoor use.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

CAUTION DURING USE

- Place the hammock stand on flat ground to ensure proper balance.
- Do not leave children unattended while on the hammock.
- The hammock should not to be used as a swing.
- Always enter the hammock from the middle.
- Do not sit past the base legs of the hammock stand.
- Regularly check to ensure the hook and wingnuts are tight.
- Regularly inspect the hammock and frame for deterioration or damage. Do not use if worn or damaged.

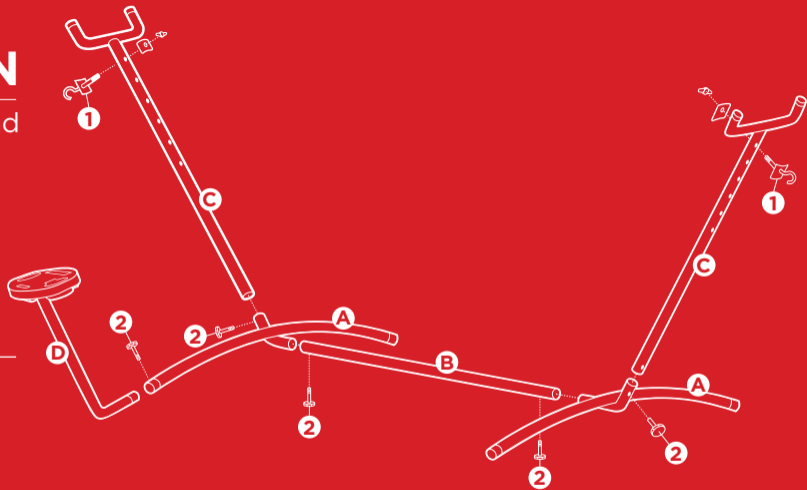

HARDWARE

- 1 Hook, wingnut, washer set (2)
- 2 Knob screw M8x16mm (5)

PARTS

- A Base (2)
- B Crossbar
- C Hammock frame bar (2)
- D Cup holder
- E Carrying Bag