 




bestchoiceproducts

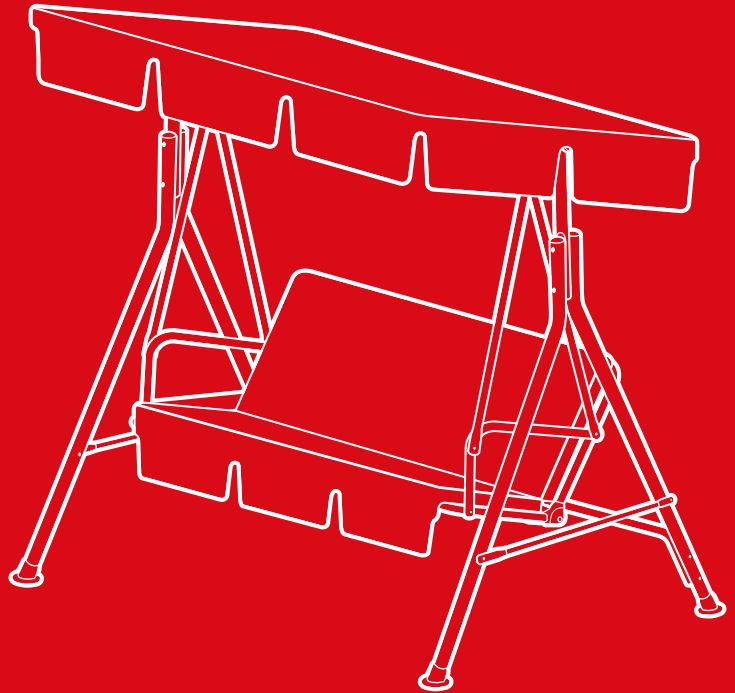

INSTRUCTION MANUAL

2-Person Outdoor Swing
with Canopy

NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



WRENCH
(PROVIDED)



450 LBS
CAPACITY

 
 
 
 
 
 
 
 
 
 
 
 
 


2 PERSON
ASSEMBLY

















APPROXIMATELY
45 MIN.
ASSEMBLY

HARDWARE

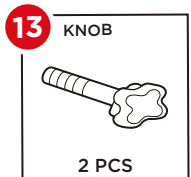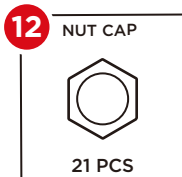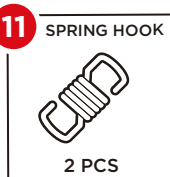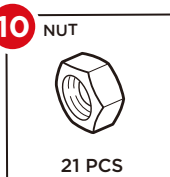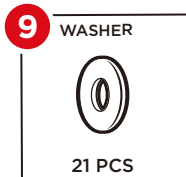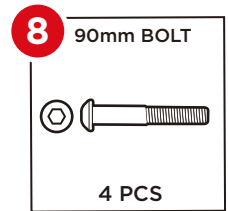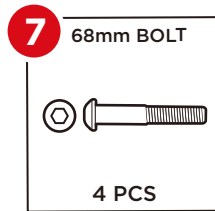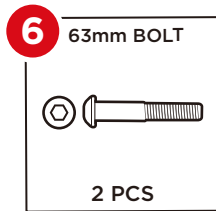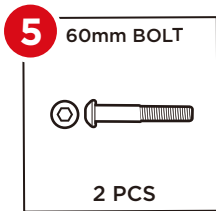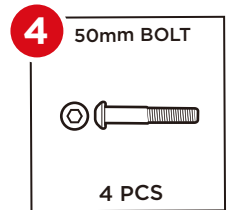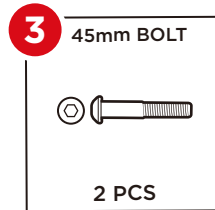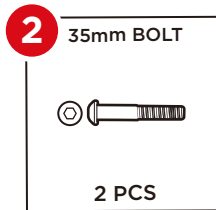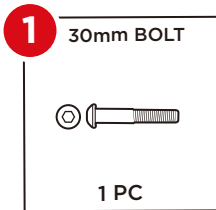


PARTS

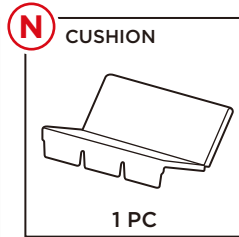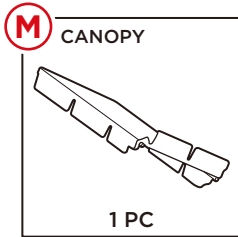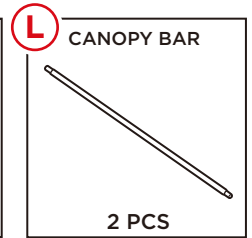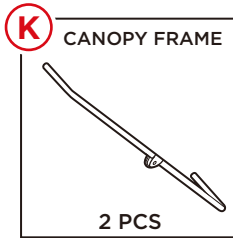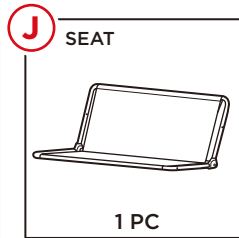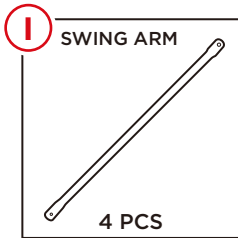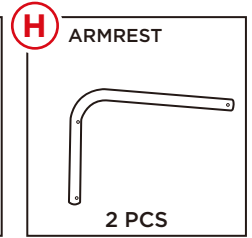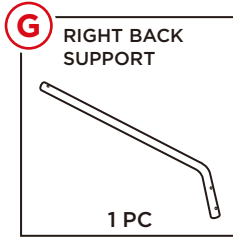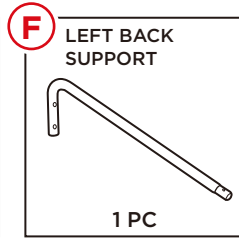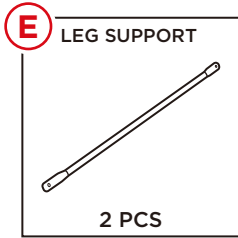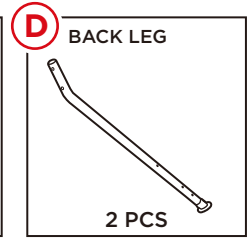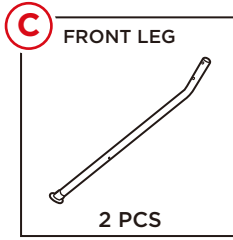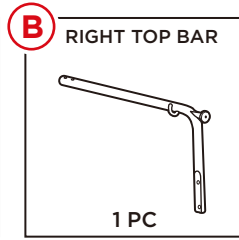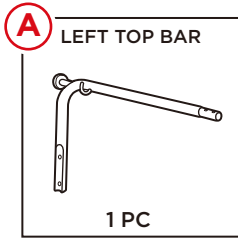              


PRODUCT ASSEMBLY

 1

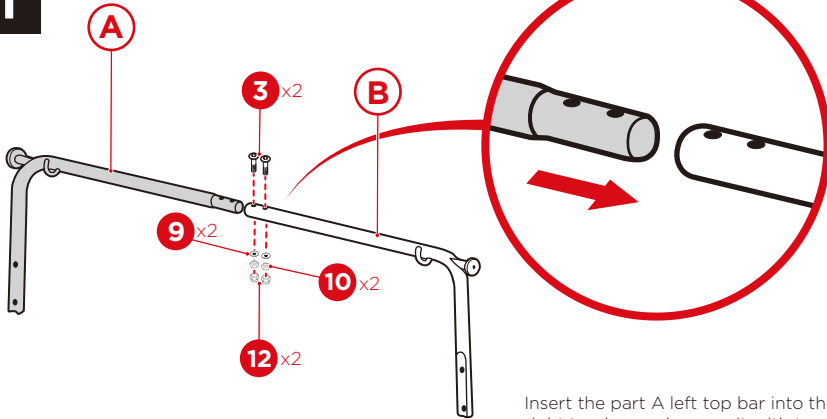

Insert the part A left top bar into the part B right top bar and secure it with two part 3 bolts, two part 9 washers, and two part 10 nuts. Place a part 12 nut cap on every nut.

 2

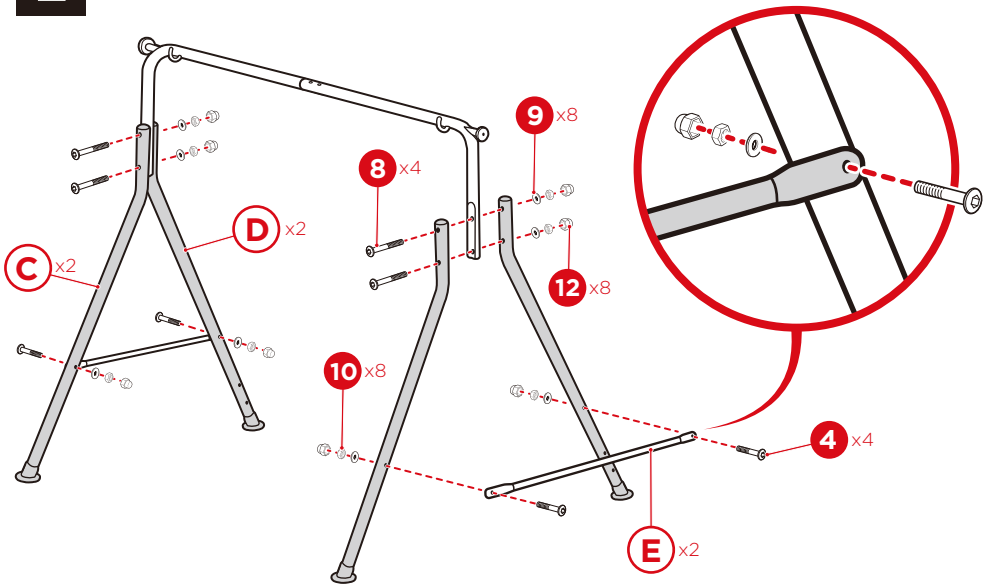


Attach a part C front leg and part D back leg to the top bar with two part 8 bolts, two part 9 washers, and two part 10 nuts. Attach a part E leg support with two part 4 bolts, two part 9 washers, and two part 10 nuts. Repeat on the other side.

Place a part 12 nut cap on every nut.


PRODUCT ASSEMBLY

 3

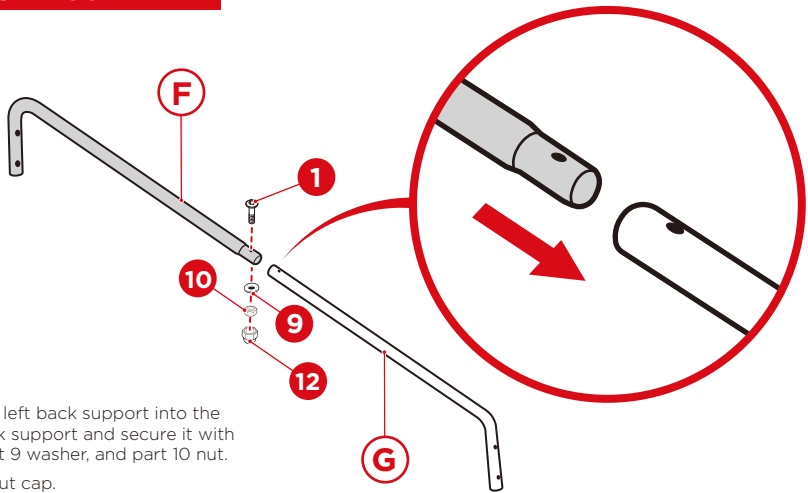

Insert the part F left back support into the part G right back support and secure it with a part 1 bolt, part 9 washer, and part 10 nut. Place a part 12 nut cap.

 
4

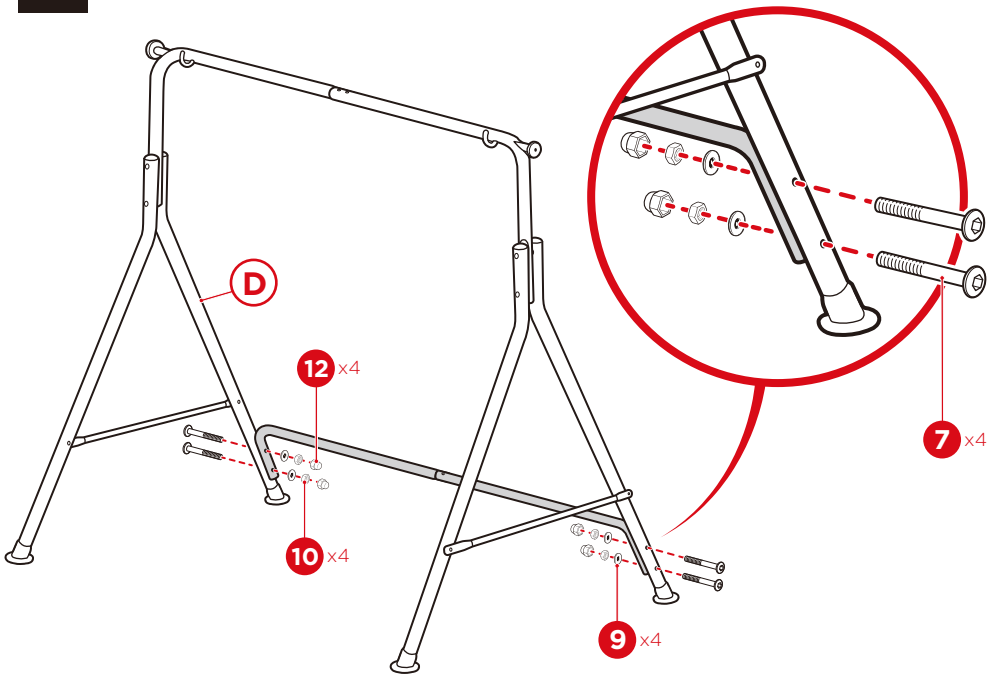

Attach the back support to the frame with four part 7 bolts, four part 9 washers, and four part 10 nuts. Place a part 12 nut cap on every nut.


PRODUCT ASSEMBLY

 5

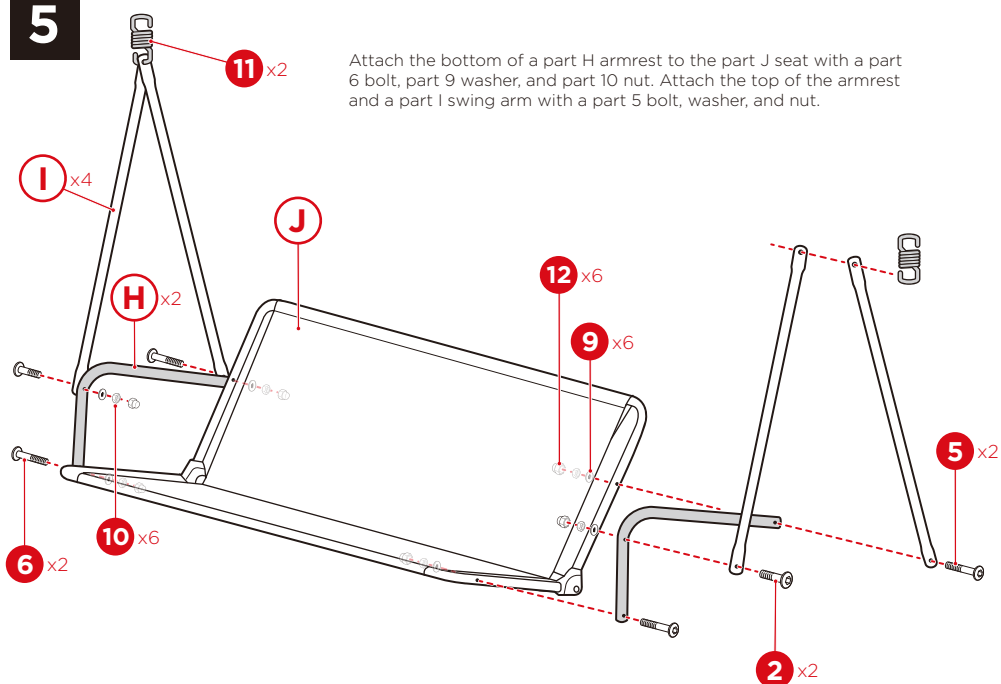

Attach the bottom of a part H armrest to the part J seat with a part 6 bolt, part 9 washer, and part 10 nut. Attach the top of the armrest and a part I swing arm with a part 5 bolt, washer, and nut. Attach another swing arm with a part 2 bolt, washer, and nut. Join the swing arms together with a part 11 spring hook. Repeat on the other side. Place a part 12 nut cap on every nut.

 
6

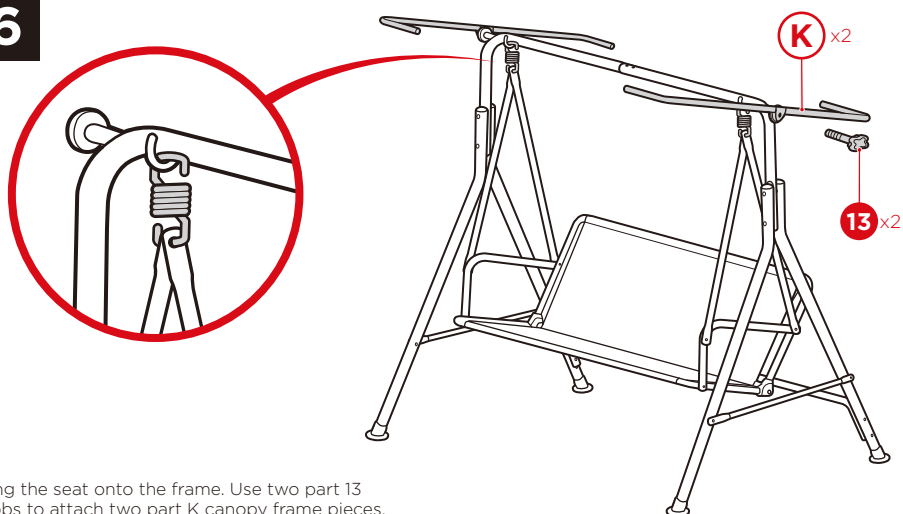

Hang the seat onto the frame. Use two part 13 knobs to attach two part K canopy frame pieces.


PRODUCT ASSEMBLY

 7

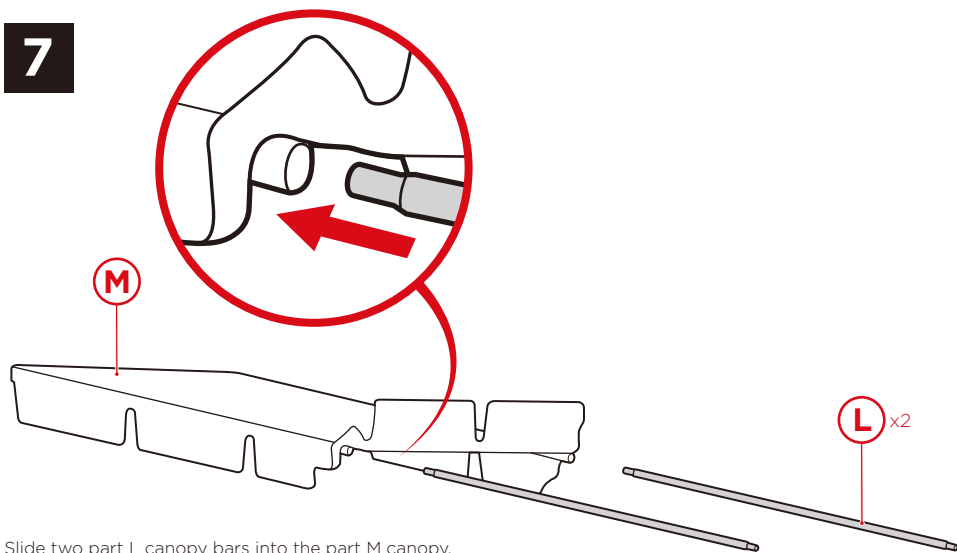

Slide two part L canopy bars into the part M canopy.

 8

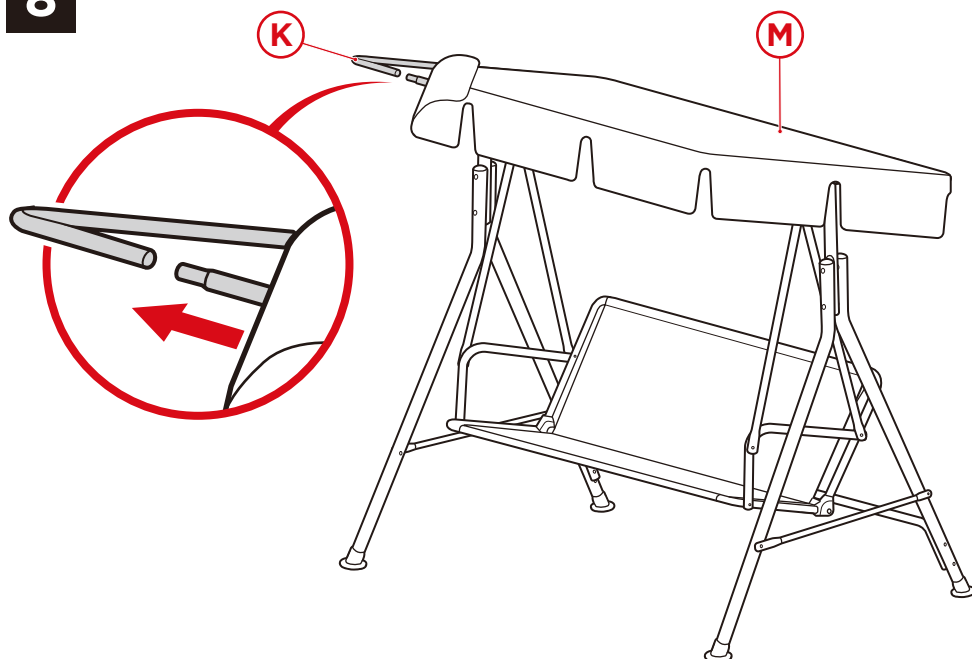


Slide the canopy bars/canopy into the canopy frame pieces.

PRODUCT ASSEMBLY

bcp

9

 Place the part N cushion.

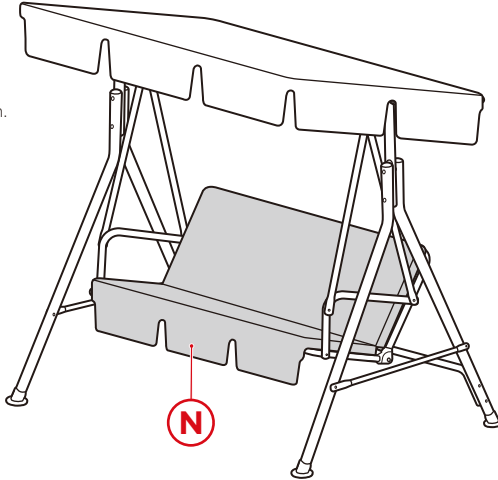

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

CONTACT US; WE'RE HERE 7 DAYS A WEEK TO HELP YOU!



bestchoiceproducts.com



customerservice@bestchoiceproducts.com



844.948.8400



[LEARN MORE!](#)

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.