



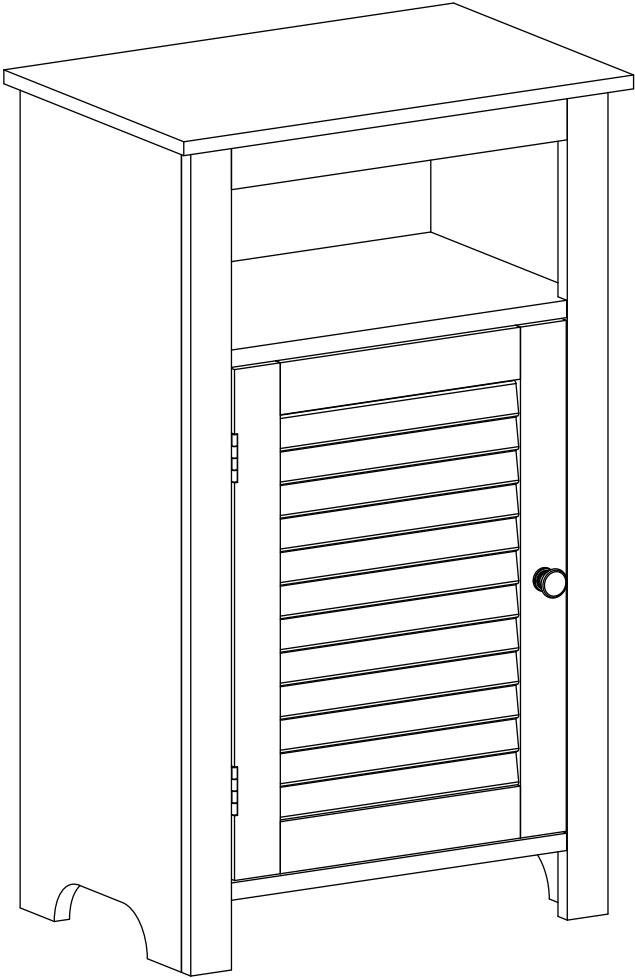














# Assembly Instruction

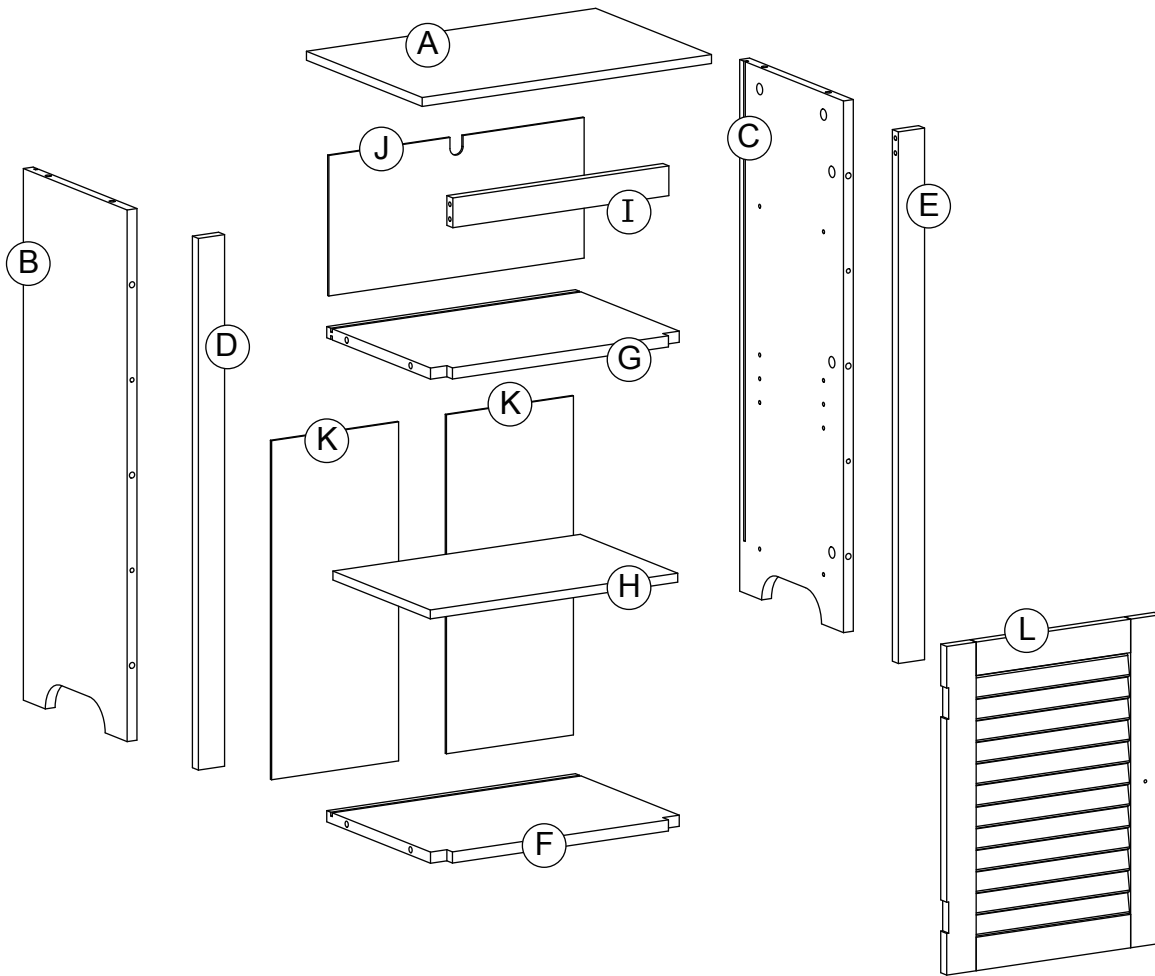


# Assembly Instruction




① X18	② X18	③ X8	④ X12	⑤ X1	⑥ X1
 Φ3x12mm			 Φ3x12mm		 Φ4x18mm
⑦ X1	⑧ X1	⑨ X2	⑩ X4	⑪ X1	⑫ X1
				 Φ4x30mm	 Φ4x12mm
⑬ X1	⑭ X1	⑮ X1			
					

# Assembly Instruction


## Step 1

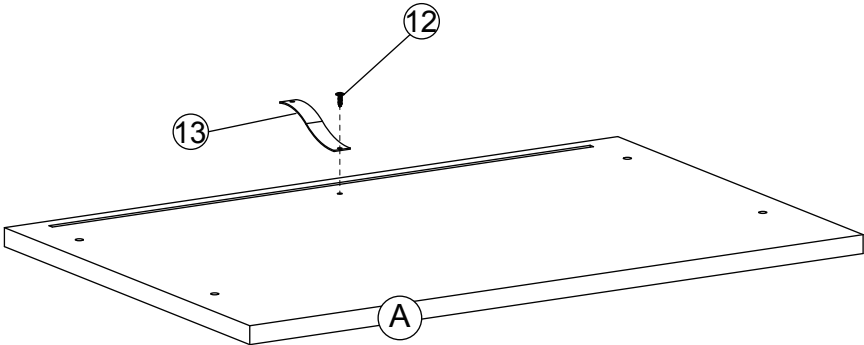

## Step 2

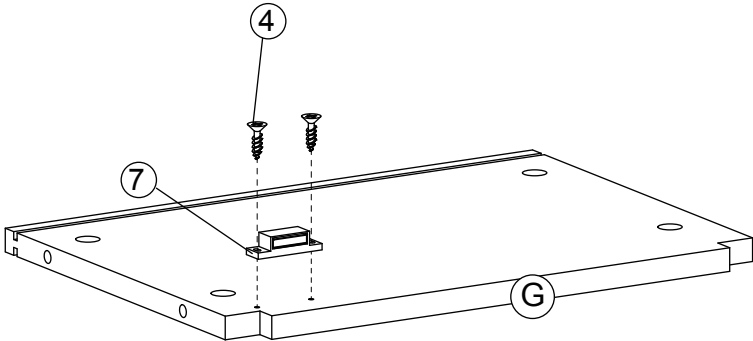


## Step 3

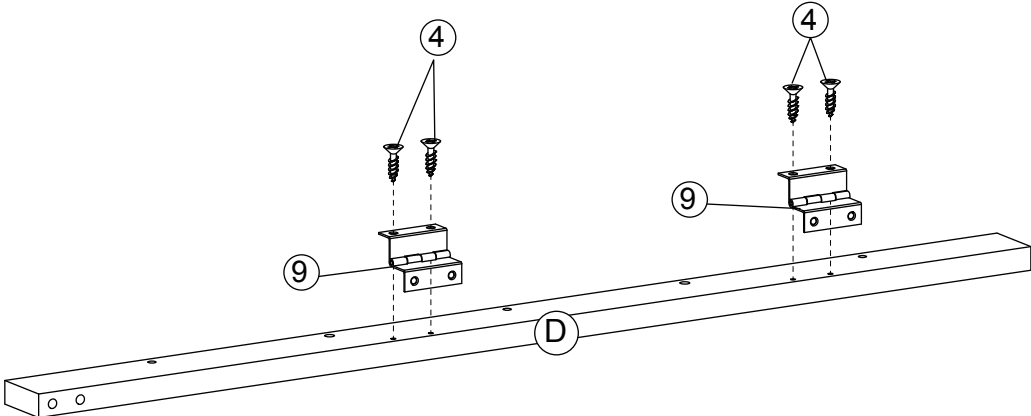


# Assembly Instruction


## Step 4

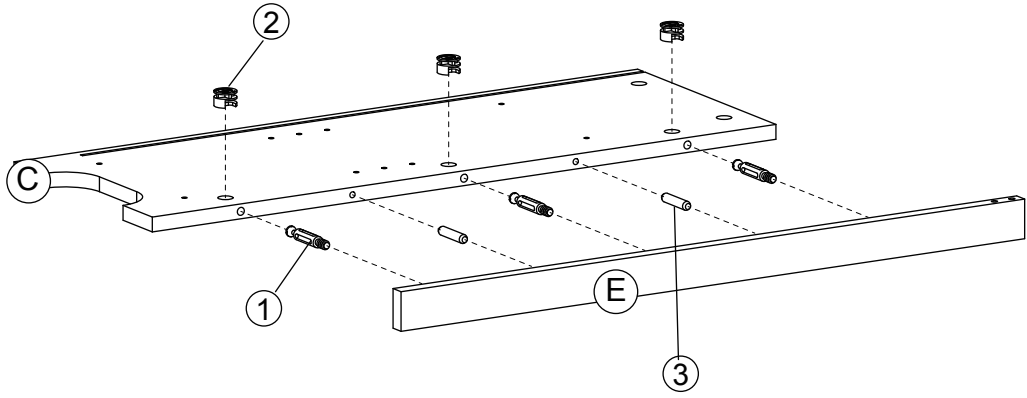

## Step 5

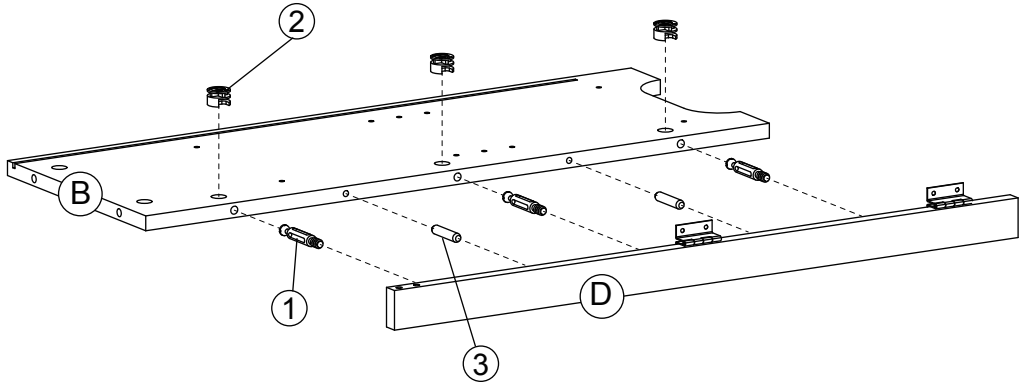


## Step 6

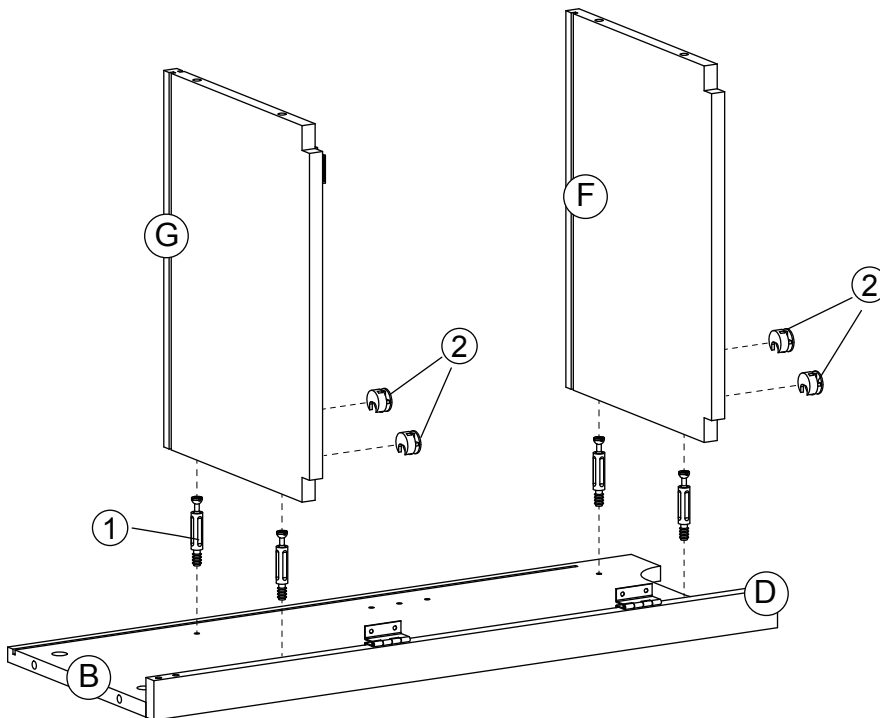


# Assembly Instruction


## Step 7

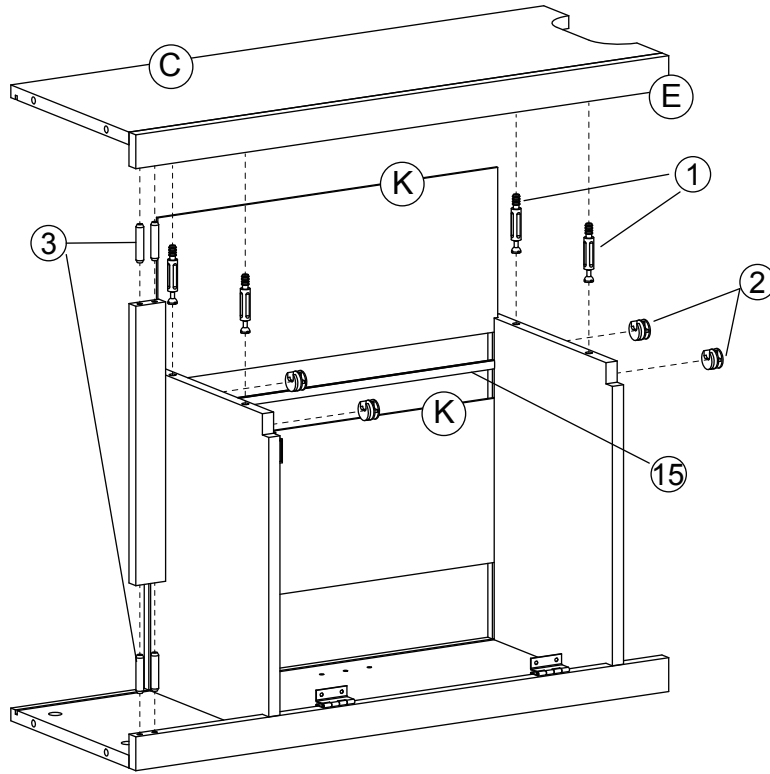

## Step 8

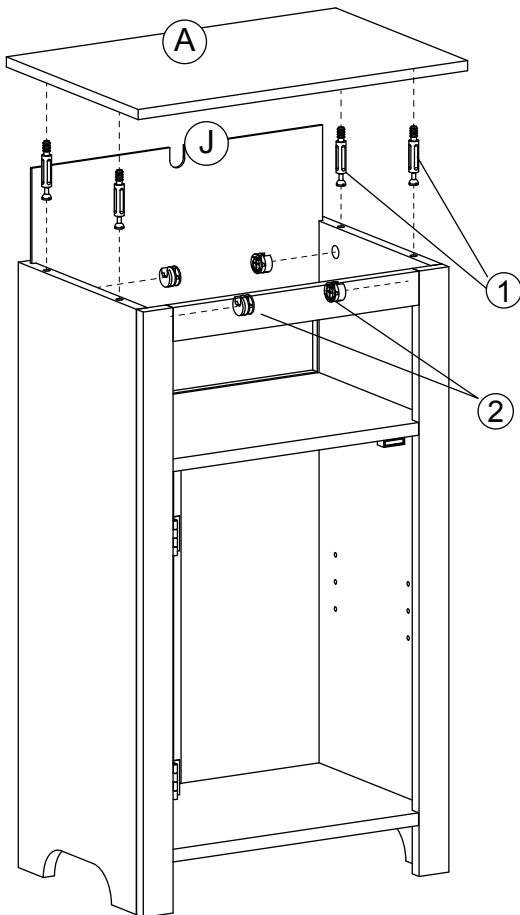


## Step 10

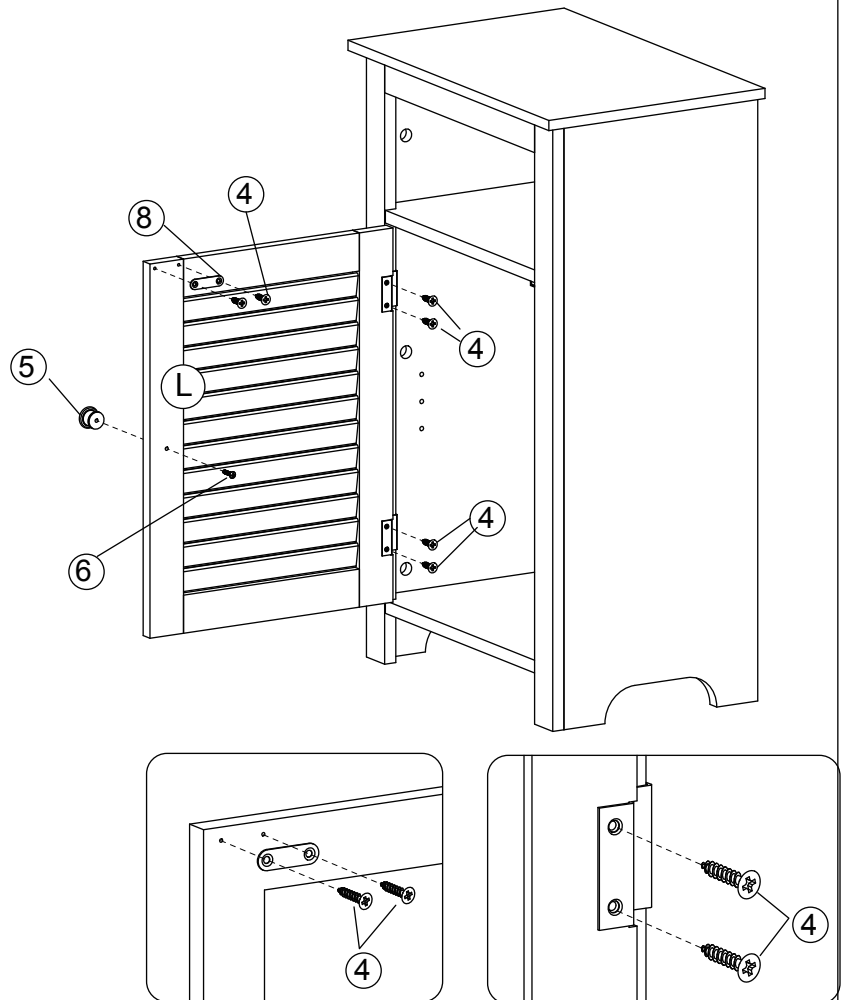

# Assembly Instruction

## Step 9

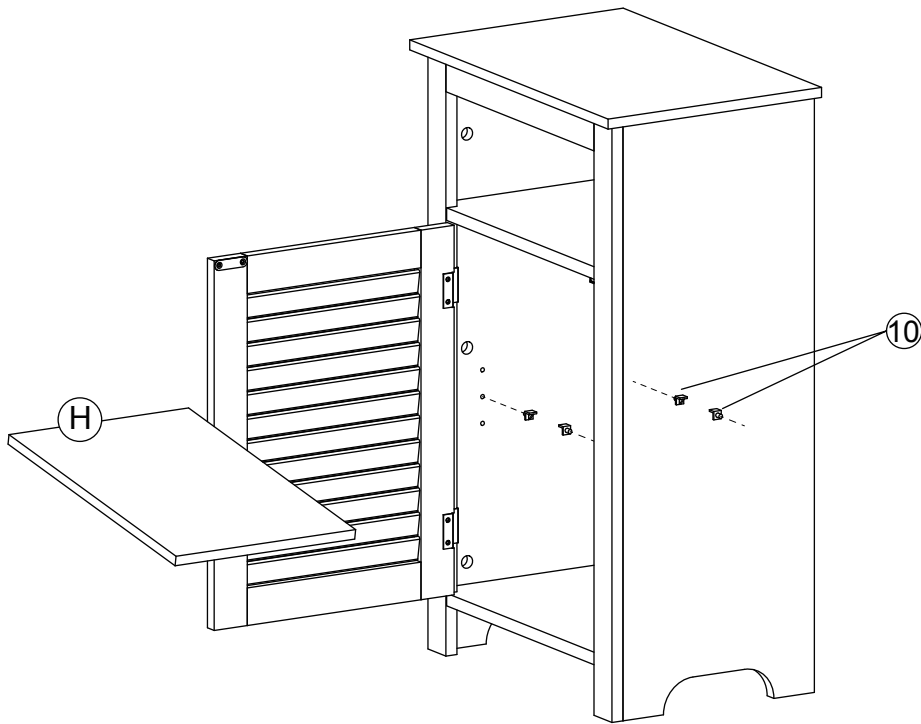

## Step 10

